


Gaber®

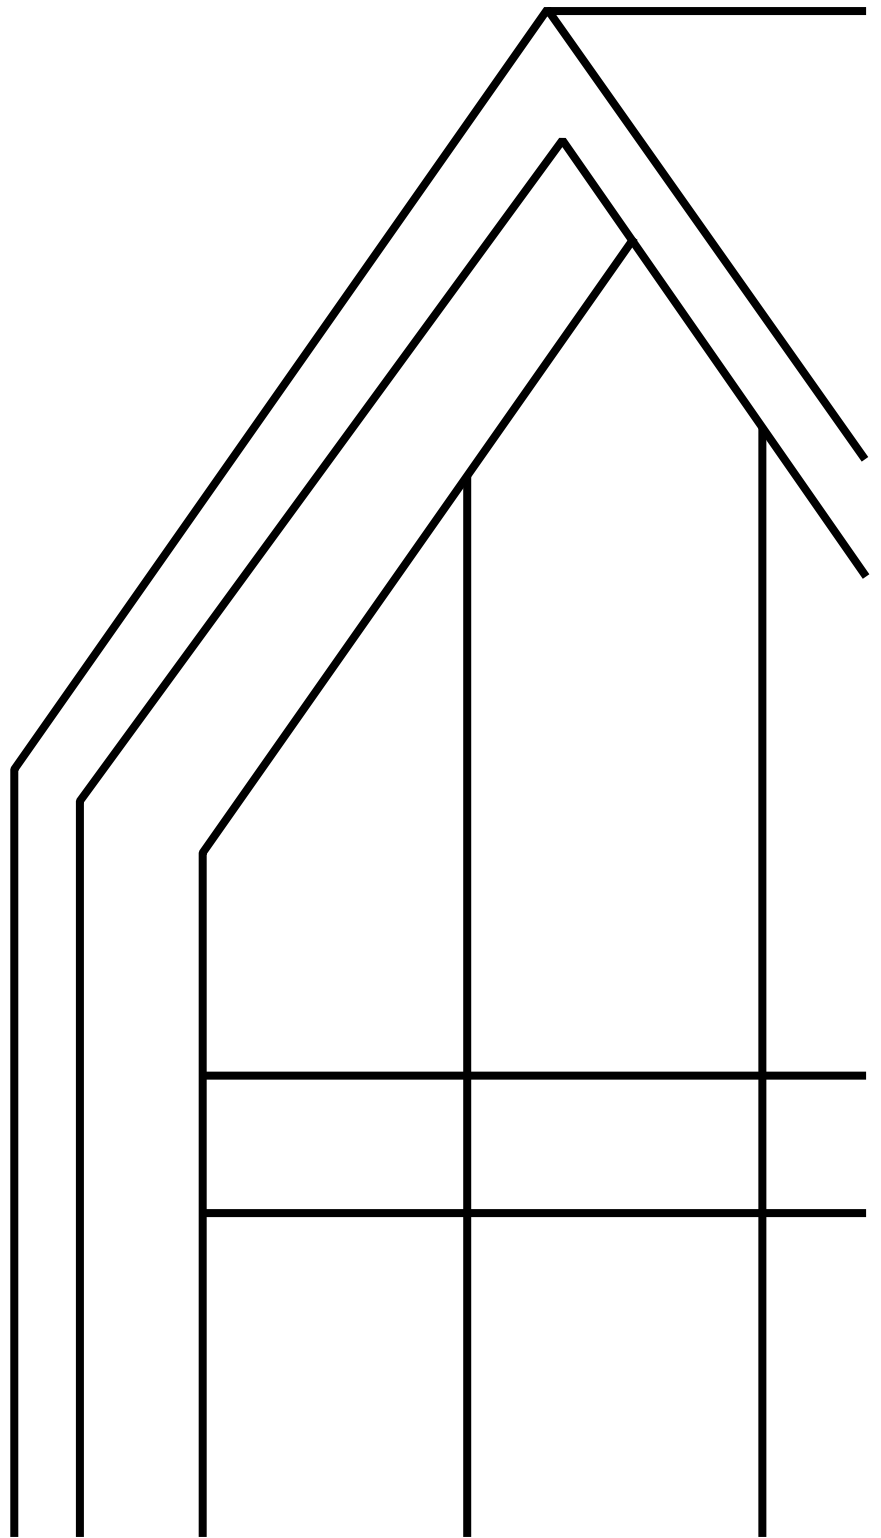

GENERAL CLEANING GUIDE

Gaber®

EASY TO CLEAN, EASY TO CARE FOR



Following the suggestions in this guide, you'll keep good looking products, preventing premature damage.

Note this guide is not a warranty: this are tips for a proper cleaning of the products. Users are responsible for cleaning products safely with detergents and tools that don't affect the surfaces: as a result you will increase performance and lifespan of the products.

Cleaning results may vary depending on the size of the stain, the cleaning product utilized and stain exposure time.



BASIC MAINTENANCE

1. We recommend cleaning the products at least once a week, avoiding dirt and contamination becoming permanent.

2. Clean the entire surface with circular movements using liquid hand soap and water, or check the specific guide for recommended cleaning materials.

Rinse and wipe with a clean damp white cloth to get rid of any excess soap.

Repeat if necessary and then let dry.

NEVER USE



Solvents like paint thinner, acetone, whiteners, waxes, silicones or detergents.



Alcohol and/or cleaning products that are not pH neutral.




Cleaning tools like plastic or wire sponges, or hard-bristle brushes that can damage the material permanently.



Don't make marks on the product with pens or markers, it may absorb the ink and stain permanently.

For more information, refer to the specific cleaning guides.

Gaber®

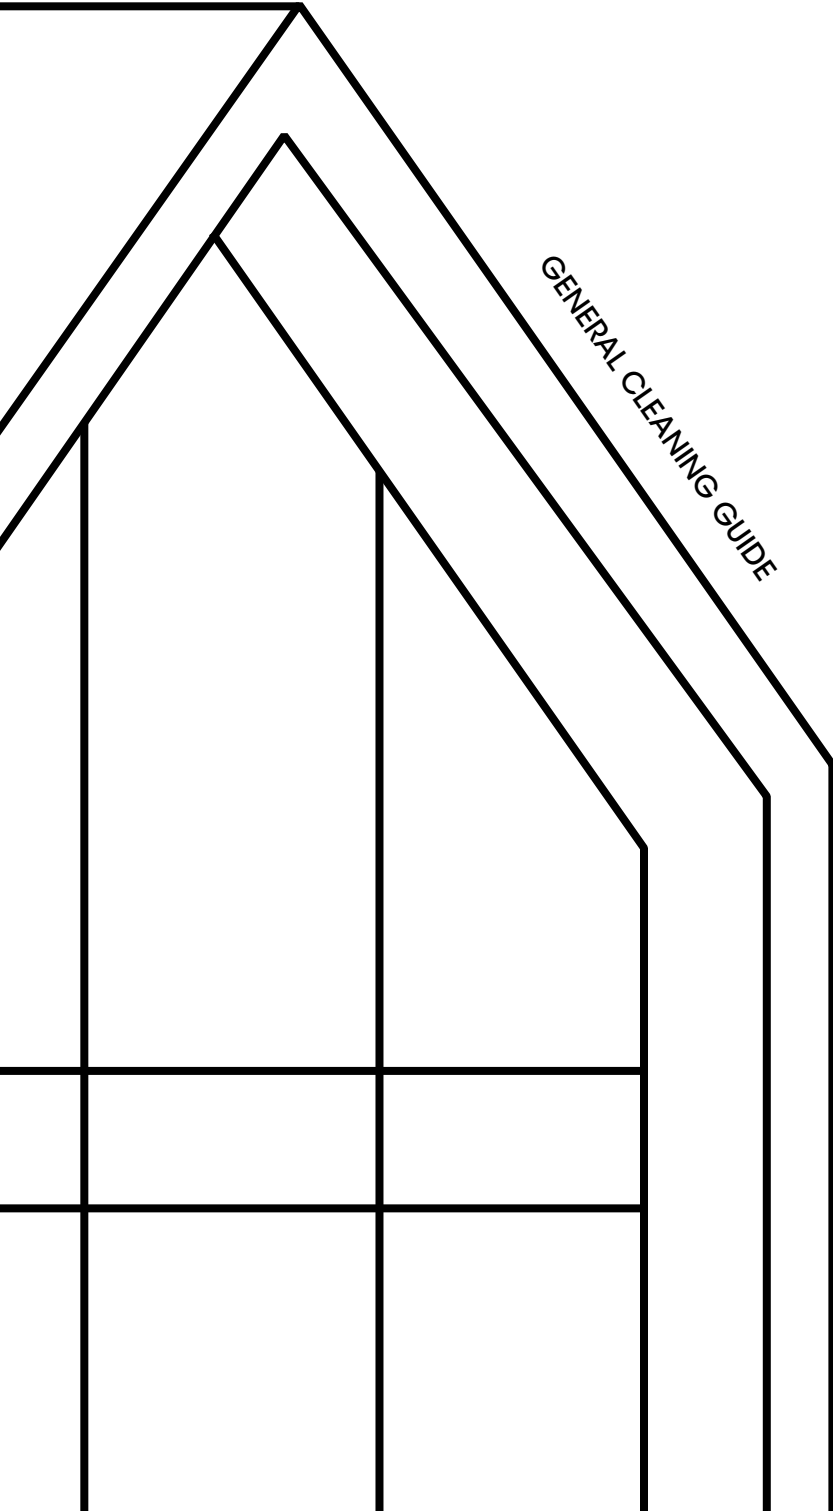

GENERAL CLEANING GUIDE

Gaber

Via Altivole 3, 31031 Caerano San Marco TV

Tel. +39 0423 915521

info@gaber.it